


PILLAR Small 36.1 Pounds

PILLAR Medium 50.7 Pounds


PILLAR Large 67.4 Pounds

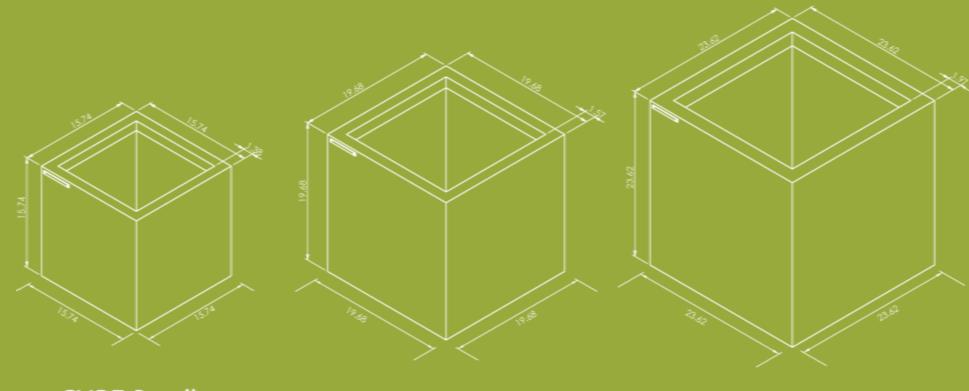



CUBE Small 23.8 Pounds

CUBE Medium 36.6 Pounds

CUBE Large 53.3 Pounds

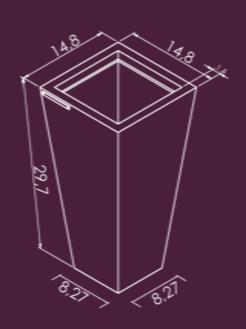

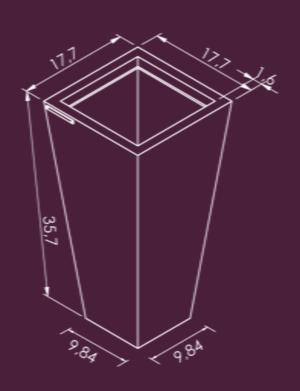

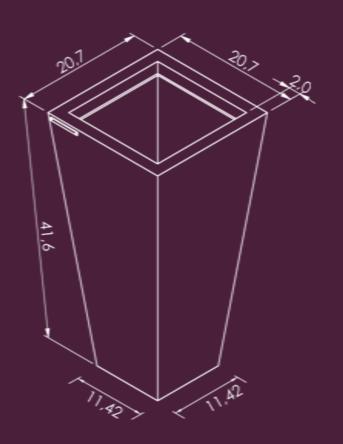



VASE Small 27.3 Pounds

VASE Medium 38.1 Pounds

VASE Large 50.7 Pounds



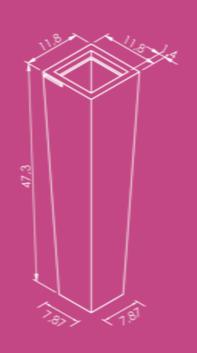

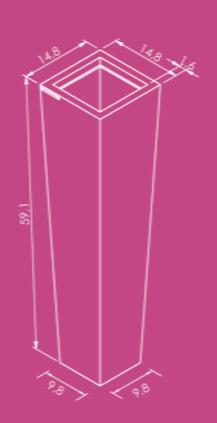



TALL VASE Small
35.2 Pounds

TALL VASE Medium
53.8 Pounds

TALL VASE Large 77.6 Pounds



provided there has been no physical damage to the coating.

Where required, the planters can be bolted to the ground through the drainage holes. Alternatively, they can be drilled and bolted into walls. However damage to paint caused by drilling may expose the planter to corrosion in the long term.

The planters should be cleaned using a damp sponge or cloth. If required a simple detergent may be used. The coating has a high life expectancy similar to that of the bodywork on an automobile. If the planters are cleaned regularly they will retain their appearance even after a long period of use. The use of scouring cleaners or the scouring side of a sponge can lead to surface damage, which in combination with the weather can eventually led to corrosion.





luxuryplanters.com

THELUXURY PLANTERCOLLECTION